



Twist[®]

TWIST
AV STAND
product set up instructions

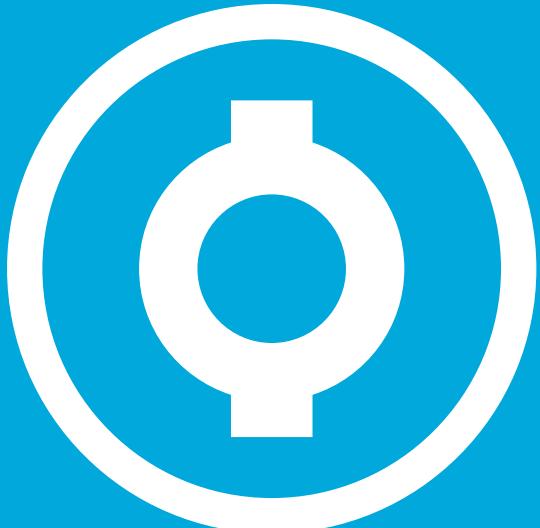




Twist AV Stand Setup Instructions

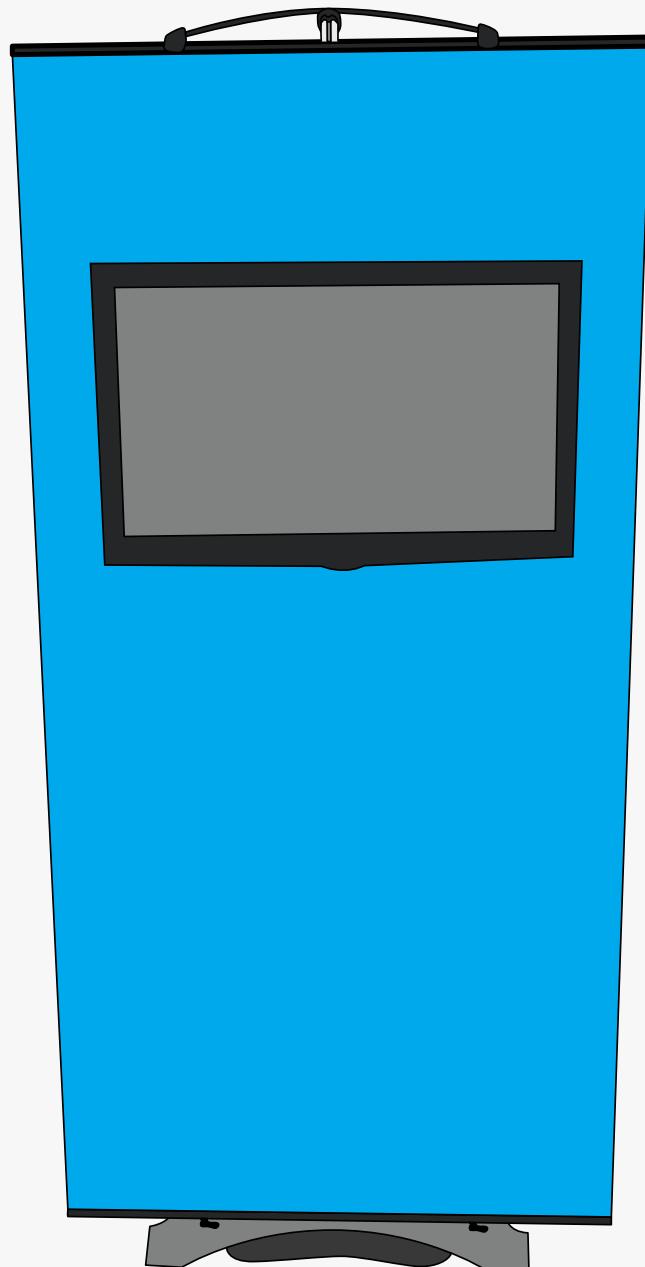


Twist AV Stand Setup Instructions

1

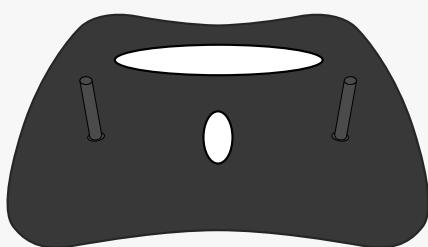



Place the AV base on the floor.

2

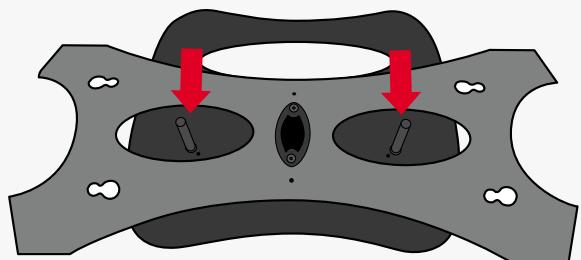

Place a TWIST base over the AV base locating uprights and manoeuvre the TWIST base socket into position.



3

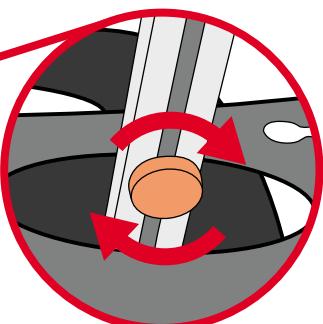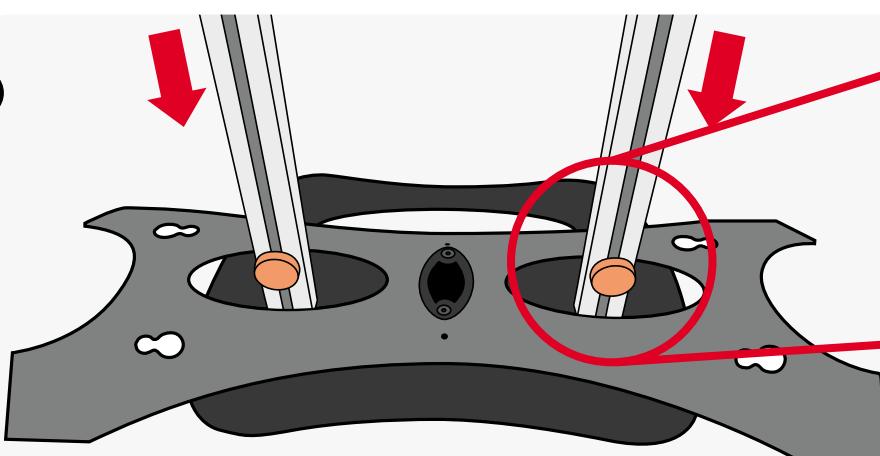


⚠️ WARNING: Please ensure orange screws are loosened fully before placing on the base, to prevent the screws resting on top of the locating uprights.

Slide the bottom AV uprights (orange fixing) on to the AV base, and tighten the orange screws.

Twist AV Stand Setup Instructions

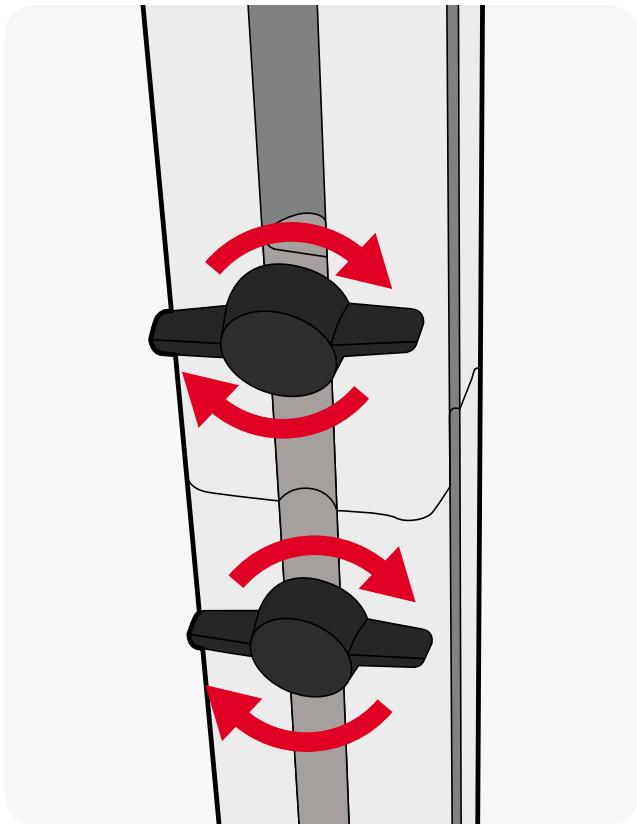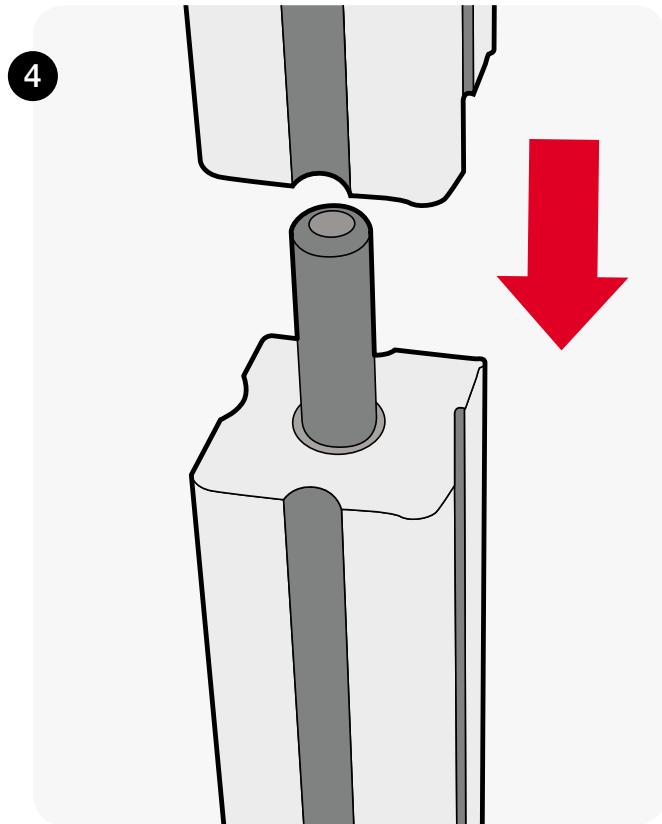


Place the next section of AV upright onto the locating pin and slide a locking pin between the joint and tighten.

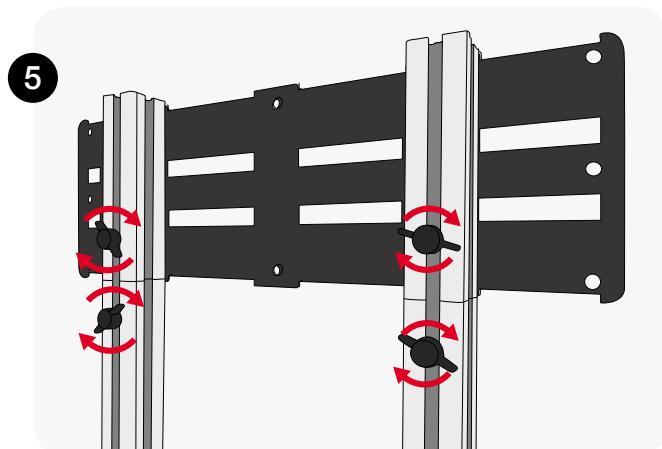


Locate the AV crossbeam into position and tighten the locking pins.



Twist AV Stand Setup Instructions

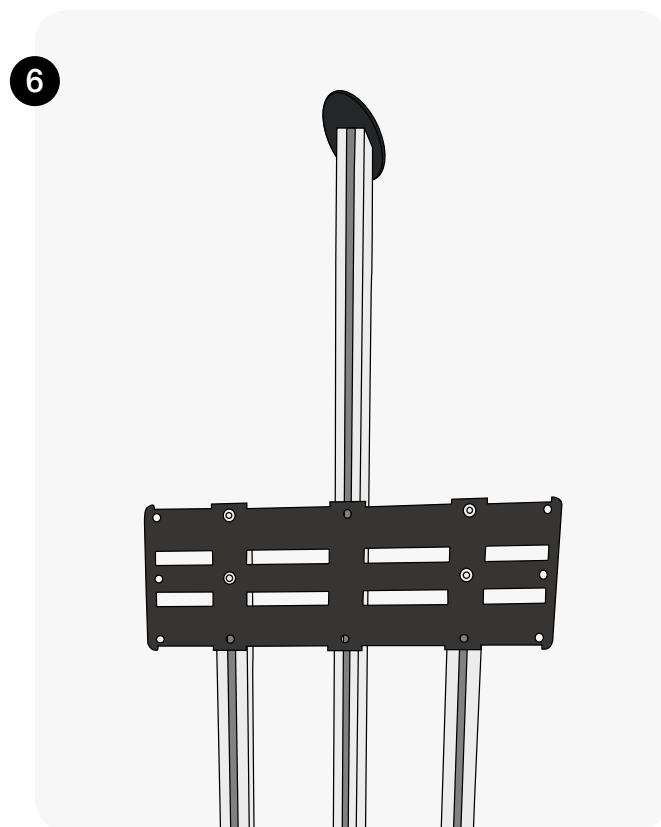


Continue to build the TWIST stand; making sure that the TWIST upright sits behind the AV crossbeam.

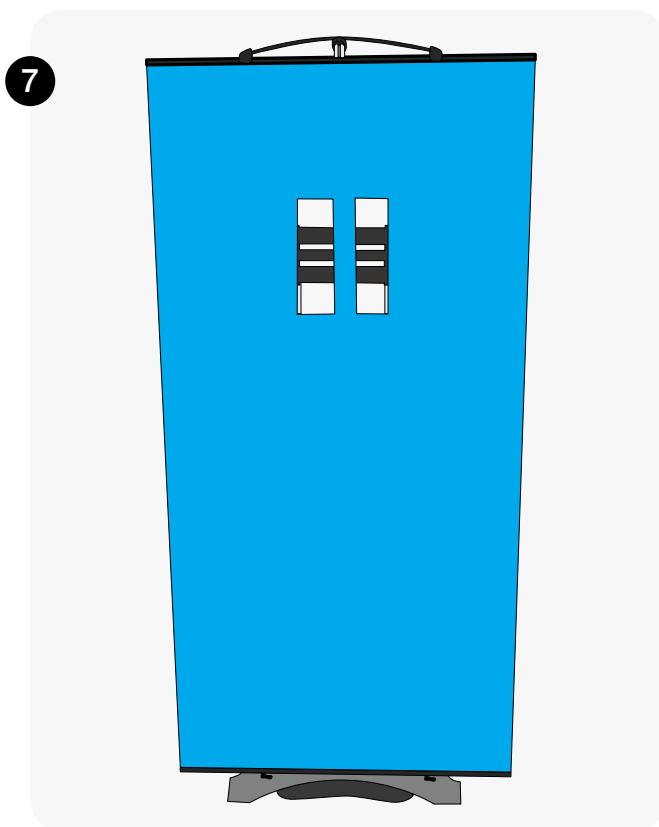

Then hang the graphic.

 But dont hook the bottom of the graphic until the screen has been positioned on the AV Stand.

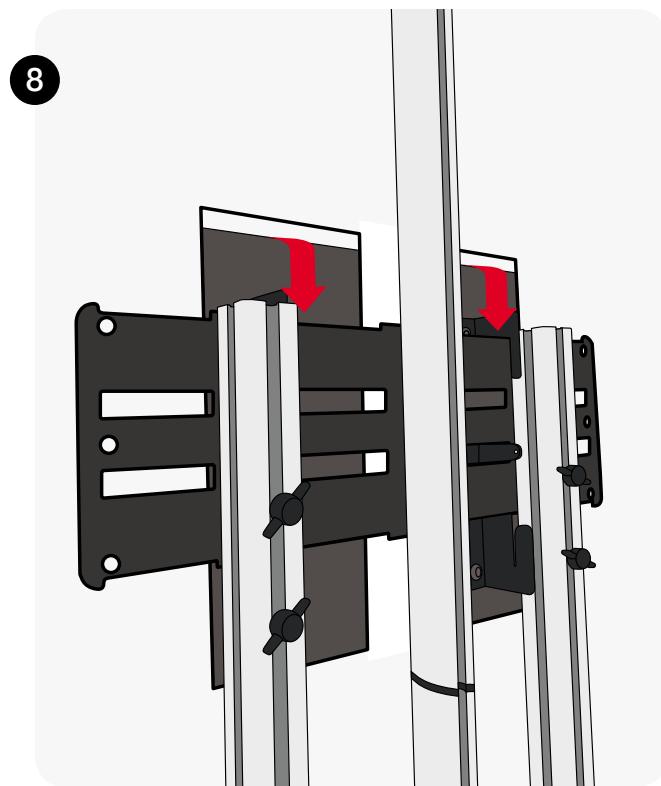

Once you have attached the brackets provided to the TV/Monitor screen, manoeuvre the screen into position so that the two brackets sit on top of the crossbeam. Once the screen is in position, further alterations can be made for cables if required. Then hook the graphic to the base.

 **WARNING:** Please check the TV vesa mounting holes for compatibility.

Vesa mounting holes:


AV 200:

100mm x 100mm
200mm x 200mm

AV 400:

400mm x 200mm
400mm x 400mm

Twist AV Stand Setup Instructions

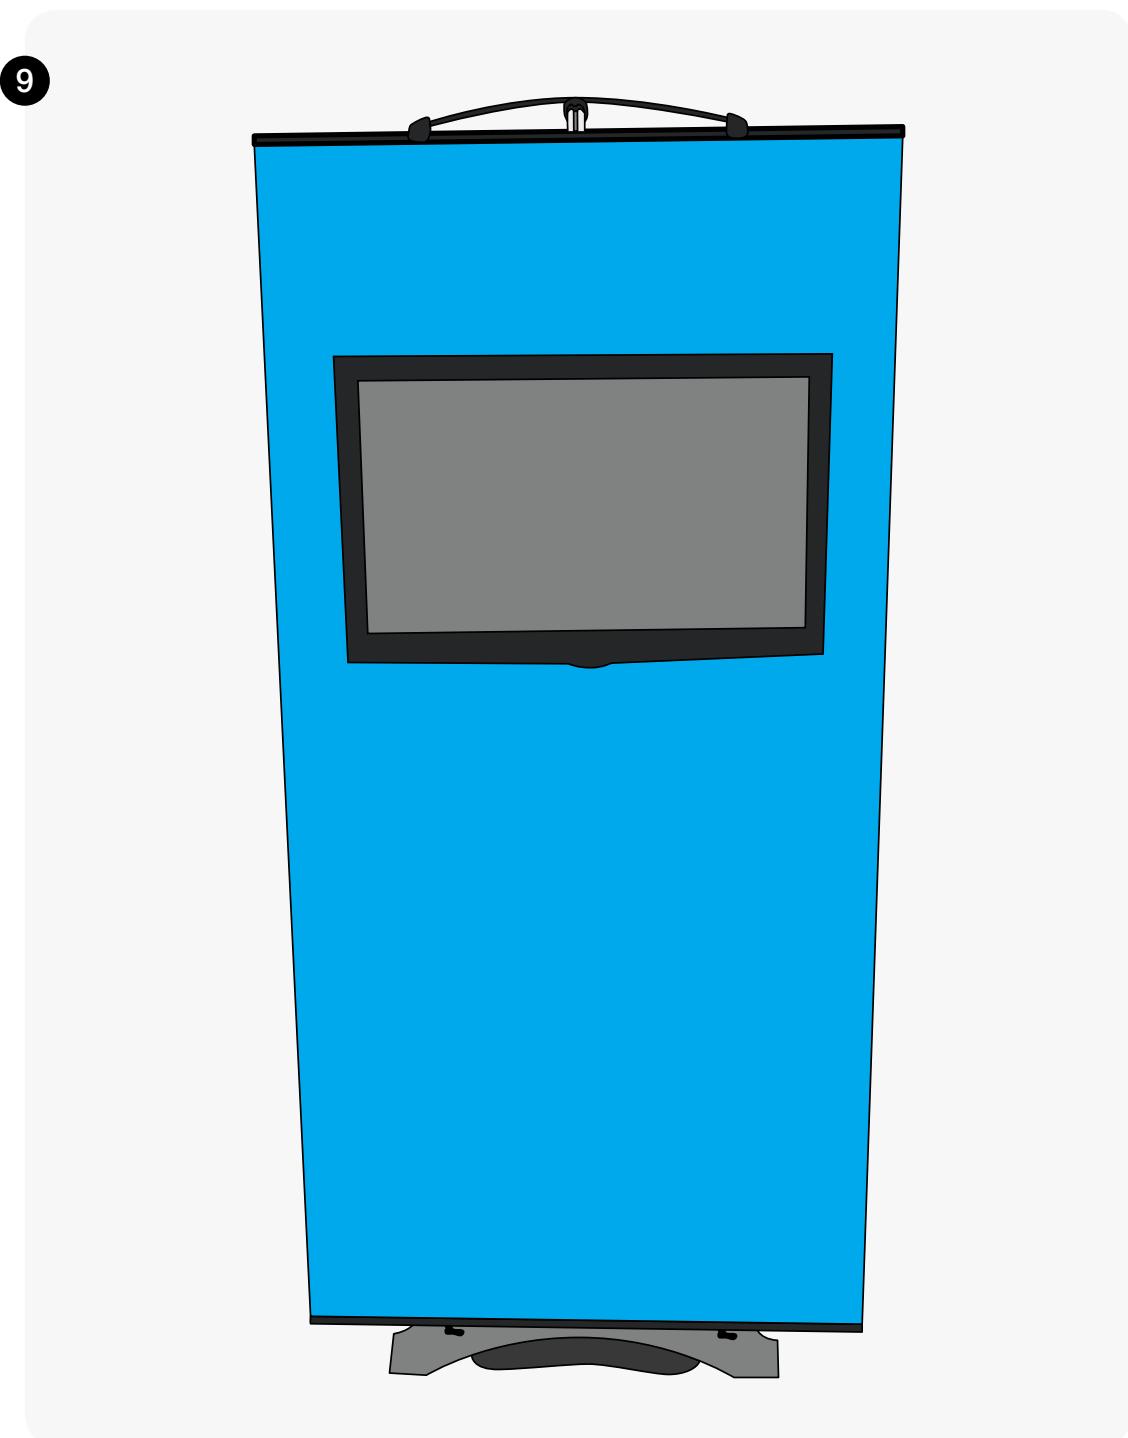

The AV stand complete.