FUGUIDE USER GUIDE

INFLATABLE CHAIR




FUGU®'s advice:

Inflate the furniture to 30%. Then add the customised cover and inflate fully.




FUGU® VALVE

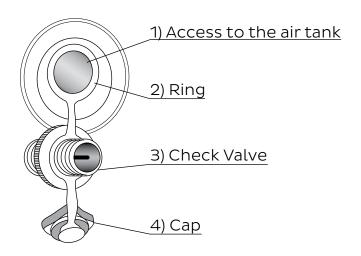


Inflate the furniture at 60% with the access to the air tank. Then reajust the cover easily.

Close the **check valve** and finish inflation.


Screw the cap.

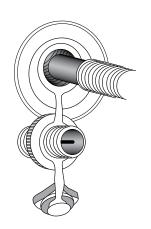

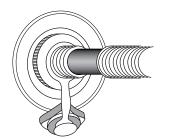





LIGHTING OPTION

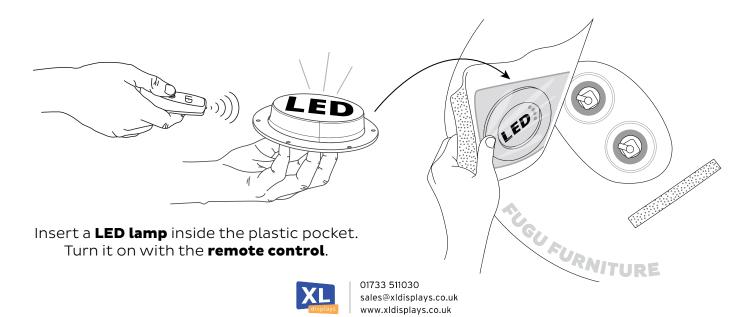


FUGU INFLATABLE CHAIR

1) See the location of the valve.

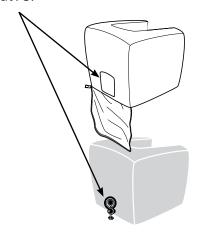


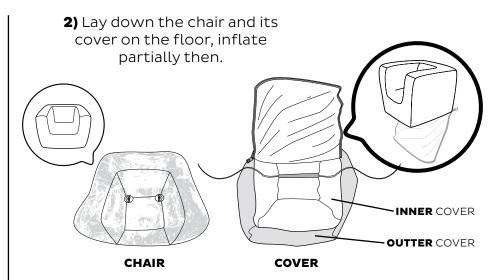


- **3)** Place the plastic bladder as the drawing below.
- **4)** Put the cover string in the eyelets of the structure.

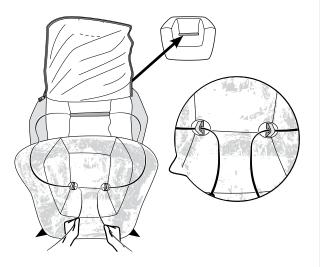


5) Tighten strong and make a knot.

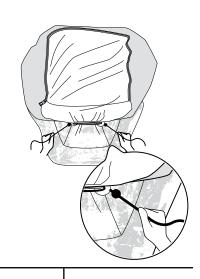


5) Finish covering the plastic bladder.

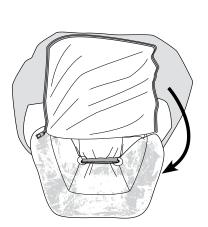

5) Place the cover properly.

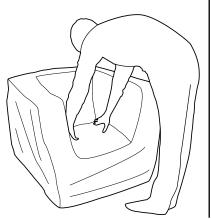


6) Close the check valve and finish inflating.

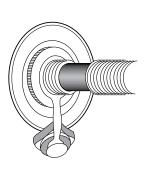

 7) Screw the cap.








01733 511030 sales@xldisplays.co.uk www.xldisplays.co.uk

REPAIRS

The fugu furniture has to be inflated to making repairs.

Holes bigger than 2cm cannot be repaired.

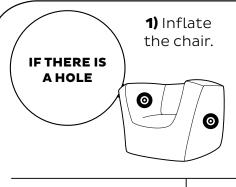


2) Take the glue and the plastic patch out of the plastic bag.



3) Cut out a circle that is twice the size of the hole.




4) Carefully apply some glue on the hole.

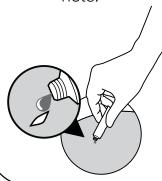

5) Immediately place the patch over the hole.



 6) Press the patch for a few minutes



7) Remove all air bubbles and glue residue around the patch.



IF THERE IS A HOLE ATTHE JOINT

2) Take the glue out of the plastic bag.



 
3) Carefully apply some glue on the hole.



4) Gently spread the glue before it dries (30 seconds).



5) Do not use too much glue to avoid ugly residue.





Do not use the Airflower for 48 hours after any repairs.

