FUGUIDE USER GUIDE

INFLATABLE TABLE




FUGU®'s advice:

Inflate the furniture to 30%. Then add the customised cover and inflate fully.




FUGU® VALVE

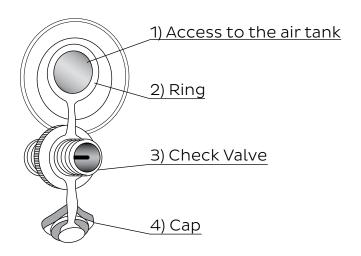


Inflate the furniture at 60% with the access to the air tank. Then reajust the cover easily.

Close the **check valve** and finish inflation.


Screw the cap.

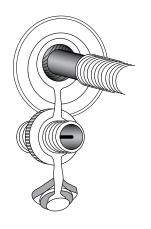

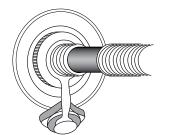




LIGHTING OPTION

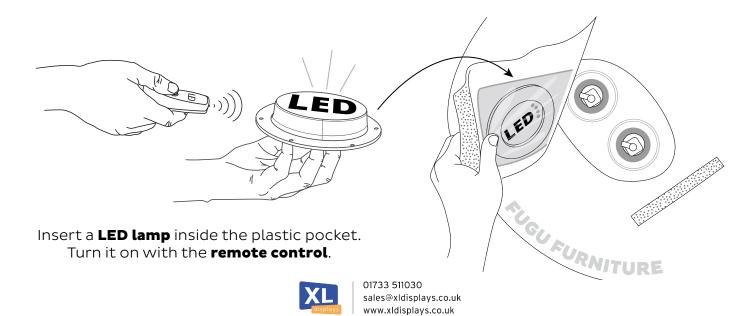



FUGU INFLATABLE TABLE

1) Take the cover and the plastic bladder out of the packaging.

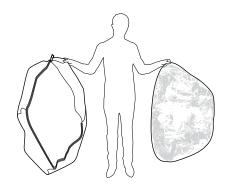


2) Lay down the table and its cover on the floor.

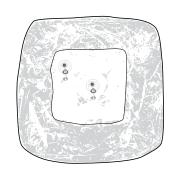


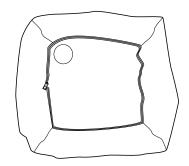


3) Cover the plastic bladder.

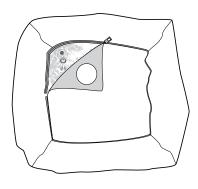

4) Close the zipper.

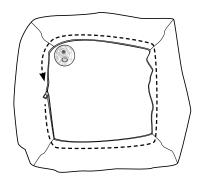


5) Inflate at 60%.

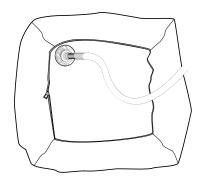


6) Reajust the cover.



7) Close the check valve and finish inflating.

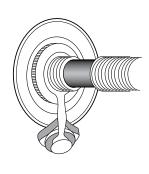


 8) Screw the cap.






9) Place the plate.

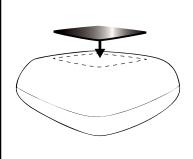

REPAIRS

The fugu furniture has to be inflated to making repairs. Holes bigger than 2cm cannot be repaired.

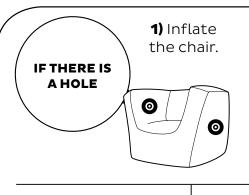


2) Take the glue and the plastic patch out of the plastic bag.



3) Cut out a circle that is twice the size of the hole.




4) Carefully apply some glue on the hole.

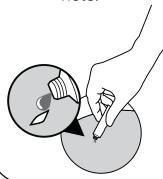

5) Immediately place the patch over the hole.



 6) Press the patch for a few minutes



7) Remove all air bubbles and glue residue around the patch.



IF THERE IS A HOLE ATTHE JOINT

2) Take the glue out of the plastic bag.



 
3) Carefully apply some glue on the hole.



4) Gently spread the glue before it dries (30 seconds).



5) Do not use too much glue to avoid ugly residue.





Do not use the Airflower for 48 hours after any repairs.

