


1


With countersunk holes in Podium top facing upwards, align with circular plate holes and fixing holes in the 8-way post. Insert 4 screws supplied and tighten with hex key

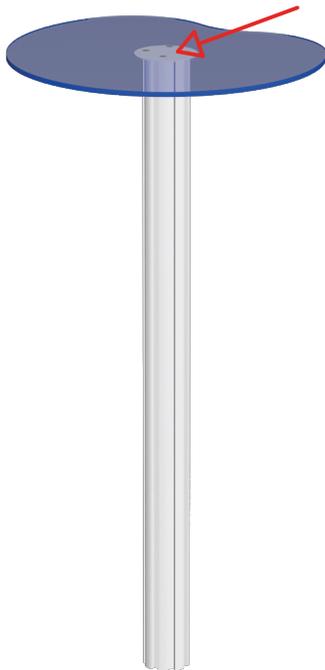

2



Position 220mm straight T-Loc profiles approx. 150mm from the top and bottom of the 8-way post and at 90° to the cut out in the table top (as pictured bottom left) Insert into 8-way post and secure by shutting clamp lever.

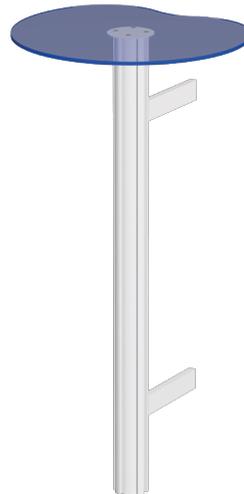

3

Affix assembled Podium Table to Centro system by inserting into 8 way post and secure by shutting clamp lever.

