


1

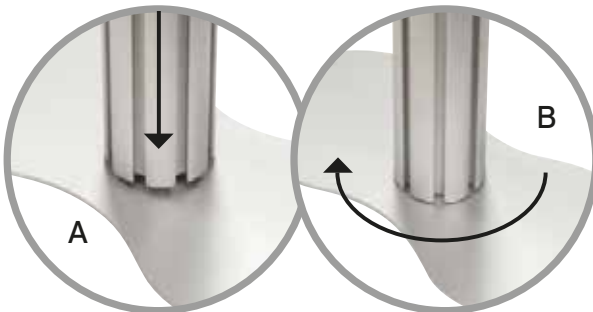


Place base plate on the floor, position lower post centrally over male fitting of base plate (A), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (B).



2

Affix upper post to lower post by positioning and rotate until assembly drops into position, female end centrally over male fitting (C), continue rotating clockwise through 90° to secure (D).

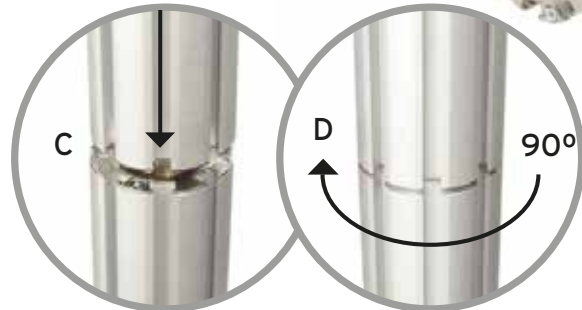

3

Slot clamps of 750mm profile into post channels and tighten grub screws with hex key supplied to secure.



4



Arc and slot rigid footer panel into innermost channels of posts, and lower into channel of horizontal profile assembly.

5



Slot first slatwall panel into innermost channels of post, ensuring 'C' shaped channel is lowermost. Slide down posts and onto footer panel. Repeat for second slatwall panel.

6



Slot clamps of middle 750mm profile into post channels and slide profile onto top of slatwall panel. Tighten grub screws with hex key supplied to secure.

7

Slot final three
slatwall panels
into posts.

8

Slot clamps of top 750mm
profile into post channels
and slide profile onto top
of slatwall panel. Tighten
grub screws with hex key
supplied to
complete assembly.

