



# Centro Slatwall Assembly Instructions

[www.xldisplays.co.uk](http://www.xldisplays.co.uk)


01733 511 030



1




Place base plate on the floor, position lower post centrally over male fitting of base plate (A), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (B).

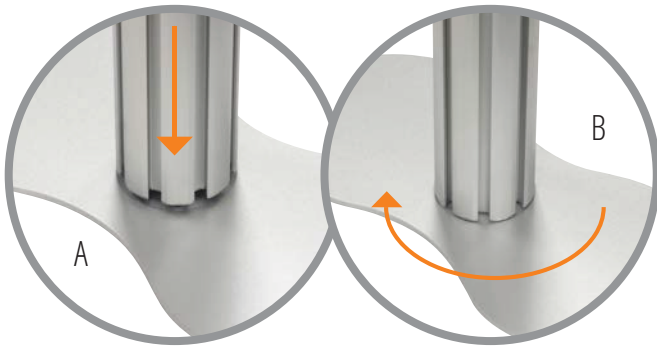

2

Affix upper post to lower post by positioning female end centrally over male fitting (C), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (D).

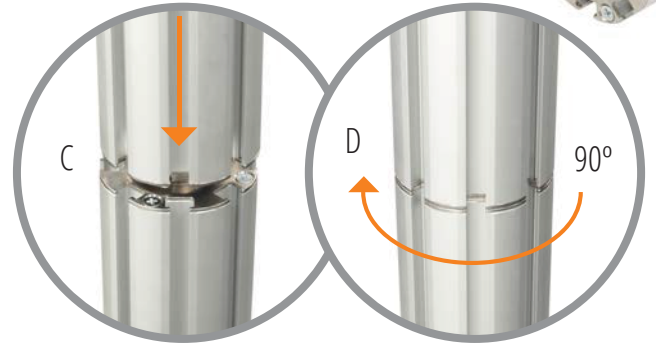


3

Slot clamps of 750mm profile into post channels and close T-Loc levers to secure.



4

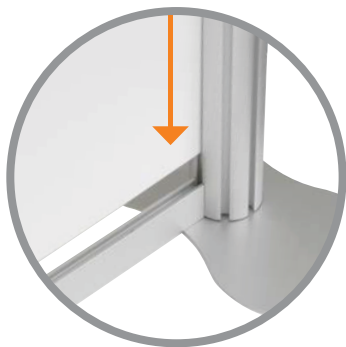

Arc and slot rigid footer panel into innermost channels of posts, and lower into channel of horizontal profile assembly.

5



Slot first slatwall panel into innermost channels of post, ensuring 'C' shaped channel is lowermost. Slide down posts and onto footer panel. Repeat for second slatwall panel.

6



Slot clamps of middle 750mm profile into post channels and slide profile onto top of slatwall panel. Close T-Loc levers to secure.

7



Slot final three slatwall panels into posts.

8

Slot clamps of top 750mm profile into post channels and slide profile onto top of slatwall panel. Close T-Loc levers to complete assembly.

