



Pro unit with internal shelf




Standard unit (no shelf)

Data Pod is a stylish workstation constructed from MDF with high quality finish thermoformed laminated tops.


### features & benefits

- Internal shelf available with Pro unit only
- Constructed from composite materials and flexible MDF tambour
- Flat packed, easy to transport and quick to assemble
- Allen key supplied
- Load bearing up to 75kgs approx
- Tops are available in Birch, Black, Silver or White thermoformed finishes
- Choice of Luxury Foam Backed Loop Nylon. Fabric wrap colours
- Carry bags included
- Standard LCD bracket included

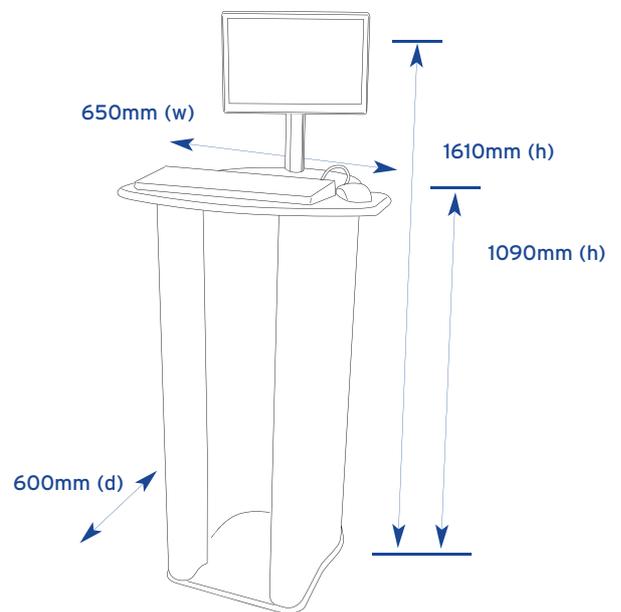


hardware specifications	wrap specifications	additional info
<p><b>Overall size (h) x (w) x (d):</b> 1610mm x 650mm x 600mm</p> <p><b>Weight:</b> 19kg</p> <p><b>Optional internal shelf size (w) x (d):</b> 280mm x 560mm</p> <p><b>Useable internal shelf height:</b> 210mm deep</p>	<p><b>Tambour Wrap dimensions (h) x (w):</b> 1059mm x 1740mm</p> <p>Including internal shelf: 840mm x 1740mm</p> <p>210mm x 1740mm</p> <p>If applying a graphic to the wrap, an allowance should be made to its size to accommodate material type, thickness etc.</p>	

## Data Pod Pro assembly

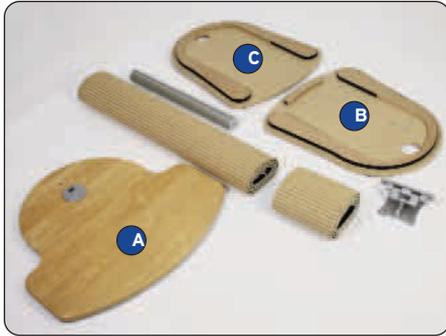


Pro Kit includes: Top (A), base (B), internal shelf (C), large wrap, small wrap, monitor bracket, Linear post, allen keys

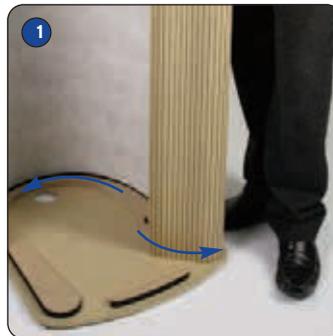

1 Place the base on the floor and attach the large wrap around the base onto the hook and loop as shown.




2 Once the wrap is in position, lower the internal shelf onto the top of the wrap, following the shape of the mounts.

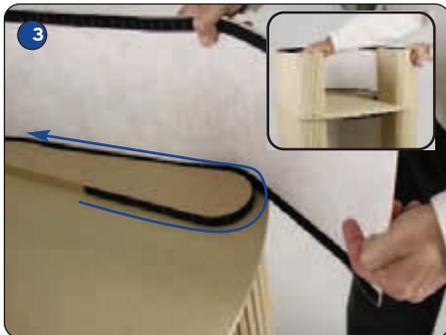

3 Take the smaller wrap and attach to the top of the shelf, following the shape of the hook and loop mount.




4 Lower the top onto the smaller wrap, inserting the mount into the shape securely.

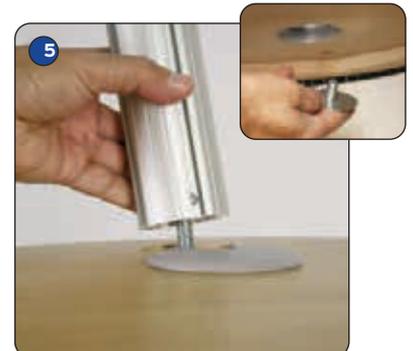

5 Insert cable management port. Take the screw and washer and push through the hole in the top, fixing into the Linear post.



6 Take the monitor bracket and screw loosely into the linear slider.

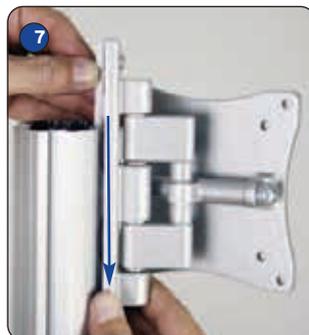

7 Slide the completed bracket down the post into position and tighten screws to secure.



8 Complete unit by attaching Linear post top into place.



NB - For the standard unit without an internal shelf, miss out steps 2 and 3.