


1



Affix security slot plate provided to underside of base.

2

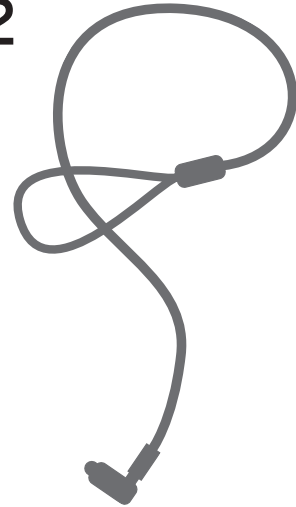

Lasso the security cord to a stationary anchor point, by passing the lock body through the looped end of the security cable.

**3**

Align and insert end of lock into security slot of MoonBase plate.

**4**

Rotate key through 90° to lock.

