



A typical kit includes: 3 tambour wraps, 3 tops and 3 bases

1.

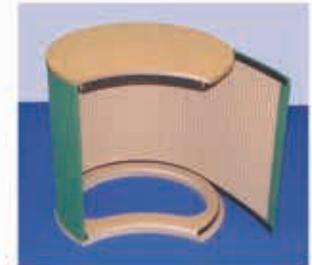

Fit each tambour wrap to its corresponding base using hook fastener, then each top.
Tip: partially unfasten each wrap, fit the top, then refasten

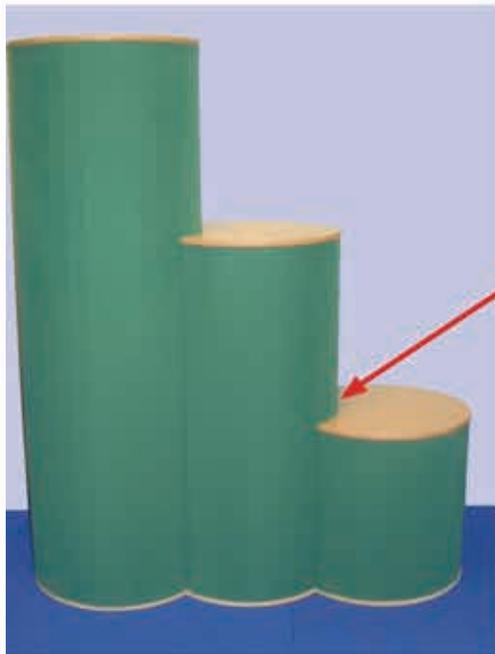

Configure the plinths as required
Link each plinth using hook fastener
(the two smaller plinths may be placed
anywhere around the perimeter of
the tallest plinth)

2.

Technical Specifications

ø400 Multi-height plinths

Overall sizes: ø400 x 1200h, ø400 x 800h & ø400 x 400h

Unit weight: 15kg approx

Wrap sizes: 1220 x 1166, 945 x 766 & 945 x 366

ø600 Multi-height plinths

Overall sizes: ø600 x 1000h, ø600 x 800h & ø600 x 600h

Unit weight: 29kg approx

Wrap sizes: 1845 x 966, 1355 x 766 & 1355 x 566

ø750 Multi-height plinths

Overall sizes: ø750 x 1000h, ø750 x 800h & ø750 x 600h

Unit weight: 36kg approx

Wrap sizes: 2315 x 966, 1805 x 766, 1805 x 566

all dimensions are in mm