



## PARTS (NOT TO SCALE)

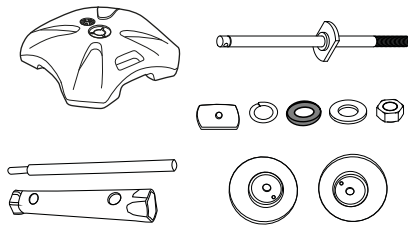





## ASSEMBLY OF BOX SPANNER

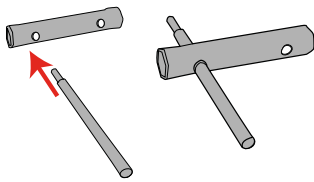



## TOOLS REQUIRED




## FOR ATTENTION

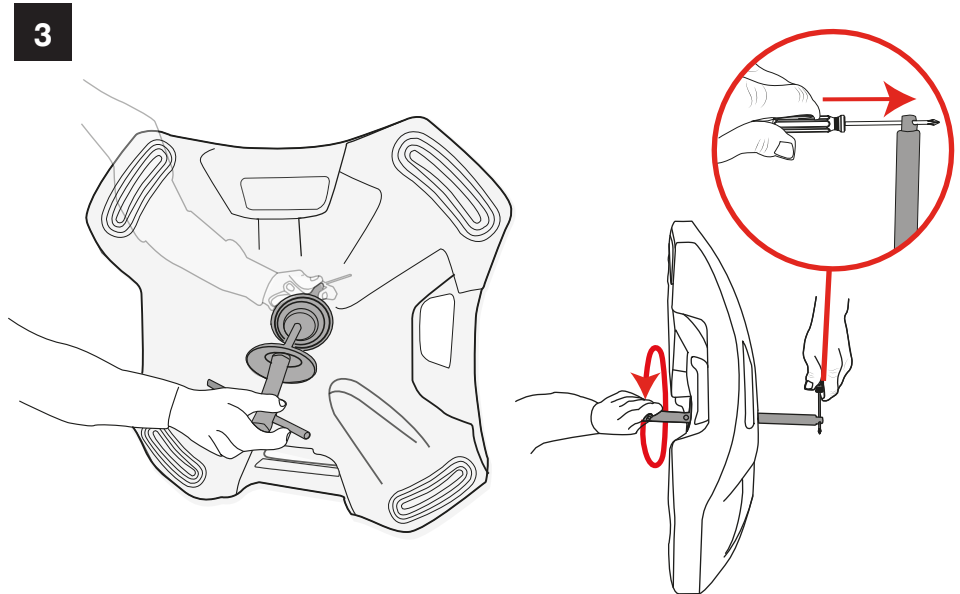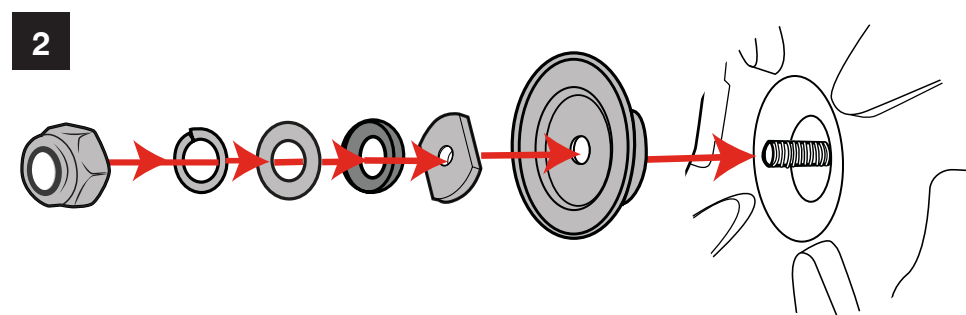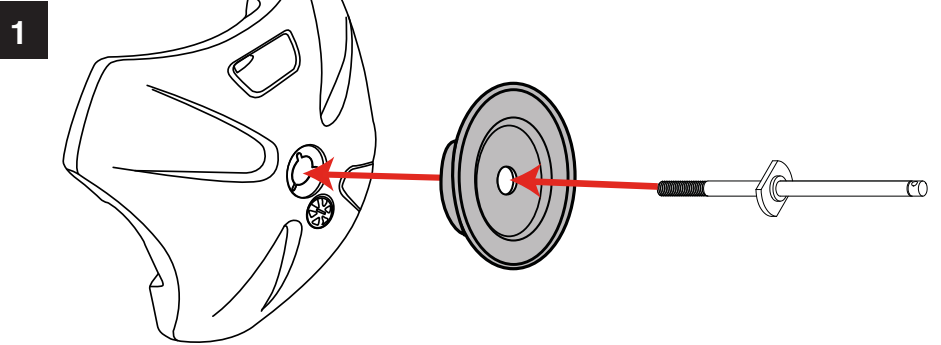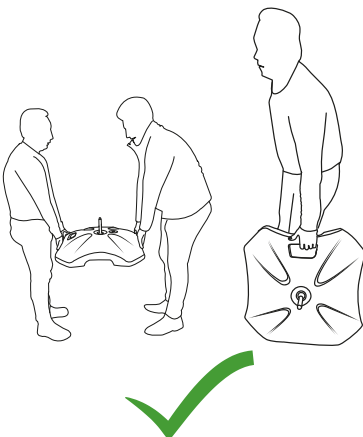

**NOTE: USE SCREWDRIVER AND BOX SPANNER TO TIGHTEN SPIGOT**

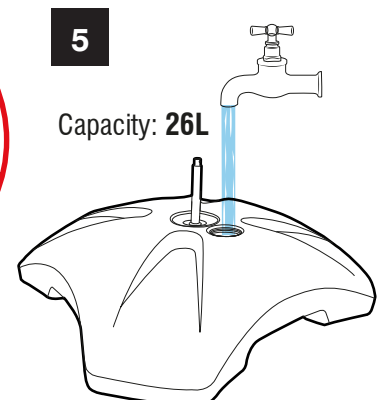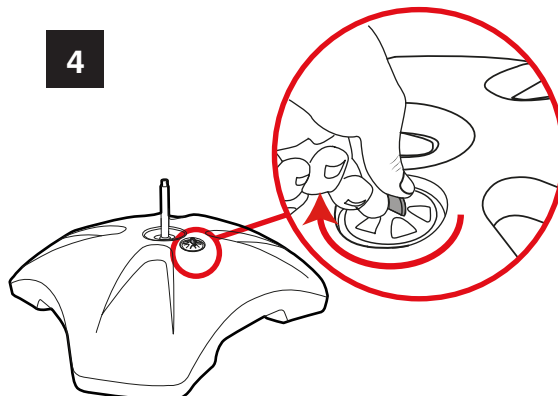

6

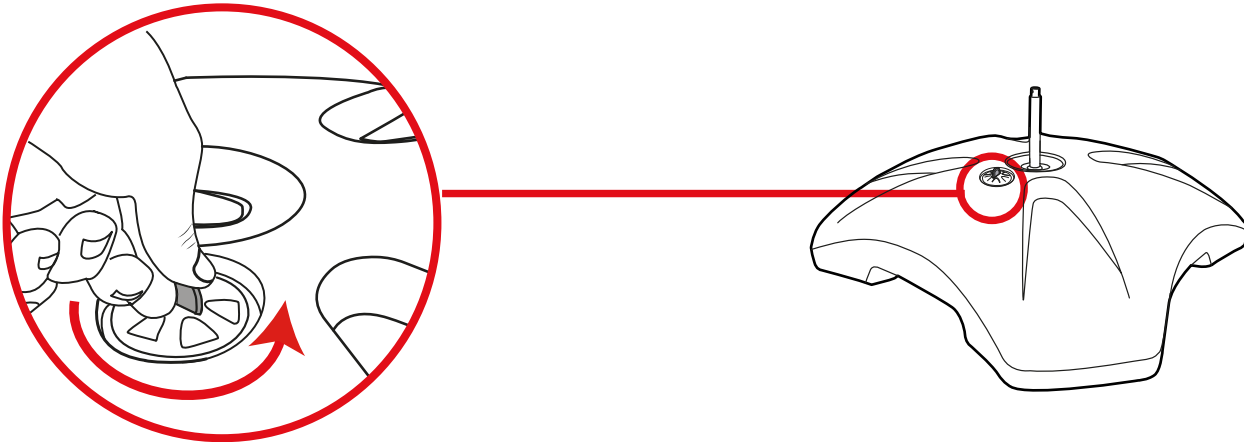


**NOTE: TIGHTEN WITH A COIN**




### STACKING THE BASES

7

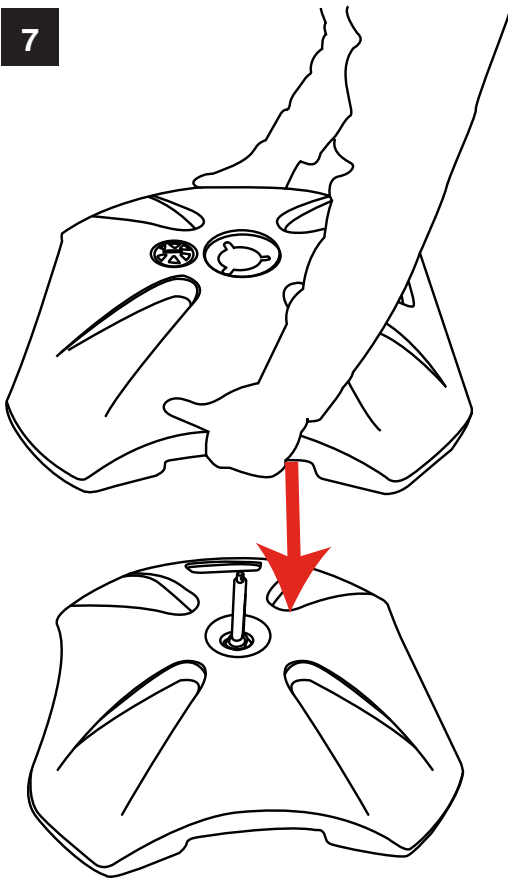

8

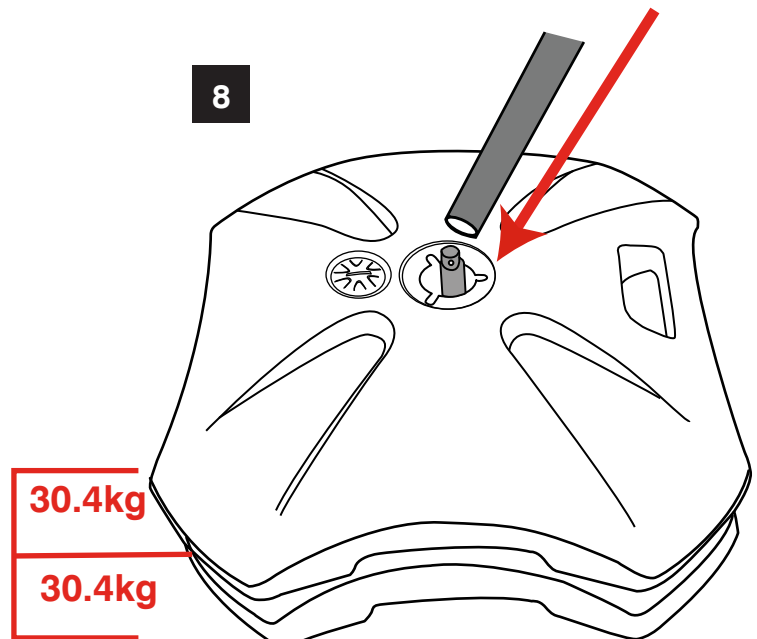

**TOTAL WEIGHT UP TO 60.8KG**