


A very robust, stylish counter or workstation with integral shelving and lockable storage. Ideal for application where security is important.

Features & Benefits

- Flat packs for easy storage and transportation
- Easy "no-tool" assembly
- Use our optional fascia kit to customise with your own printed design
- Main unit available in Black, White, Woodgrain or silver
- Side panels available in White or Silver
- **Standard** with top, sides, aperture back panel and front panel
- **Deluxe Style** with top, sides, front, back, 2x internal shelf and lockable door
- Two top shapes available Keystone and Elliptical



Deluxe V Counter Back View

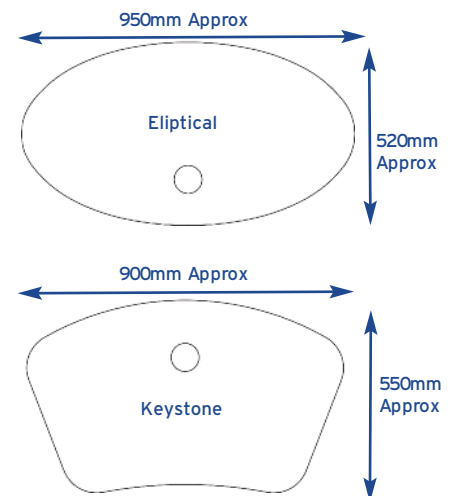


Hardware specifications

Assembled Dimensions (mm):
 Elliptical: 1 020mm (h) x 950mm (w) x 520mm
 Keystone: 1 020mm (h) x 900mm (w) x 550mm (d)
 Weight:
 Standard 17.5 approx
 Deluxe 20kg approx
 Load Bearing:
 Standard and Deluxe 100kg Approx

Please see template for fascia kit



Kit includes: Top, front, back, 2x sides, 2x shelves, 8x turn parts and 2 x hand wheel nuts. Foam tape supplied but not applied (The above kit shown is a deluxe kit)

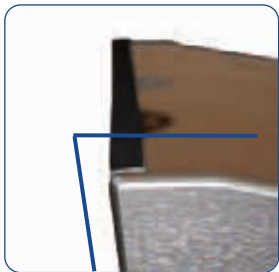

Ensure top of side is aligned/Parallel with front/rear face.
Please note: The adhesive dot indicates the top.




To build the base of the unit align front with the locators on the sides, Screw the turn parts through the front and into the side panel. Repeat this for the remaining sides



Insert the smaller of the two shelves at the bottom of the unit. Rest the shelf on the shelf locator. Repeat these steps with the upper shelf. **Please note: 8 screws are supplied to fix shelves permanently**



Lift the top onto the base of the unit

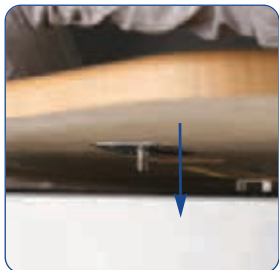


Lower the table top onto the base of the unit. Make sure the table top locators are in the locators on the sides of the unit.



Once the table top is in place secure using hand wheel

Optional extra fascia kit

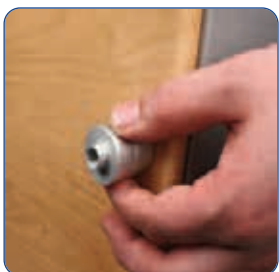

Replace the top set of turn parts on the front of the counter with the stand off kit



Place the locators of the fascia onto the stands off kits



Screw down the top of the stand off's to secure into place.